




Specification

Rated Power:3W Peak Power:5W
Impedance: $8\Omega \pm 15\%$
Resonant Frequency / f_s :550Hz $\pm 20\%$
Voice Coil diameter: 19mm
OD: 33.0 ± 0.3 mm Thickness: 12.5 ± 0.5 mm
Operation temperature: -20 to +60°C
Operation: 3.46V Sweep Time at 2s
Power Test:IEC268-5/4.9V/48hrs
Weight: $30g\pm 10\%$
Subject to technical modification

Application

The exciter will be glued onto a flat vibrating surface (e.g sound panel,table plate, plasterboard, ceiling panel or glass panel) so that the surface serves as a kind of speaker cone. In contrast to conventional speakers, exciter primarily excites bending waves on the surface to provide a wider radiation. Sound quality and volume depend on the material properties and the dimensions of the mounting surface.

Impedance and frequency curve

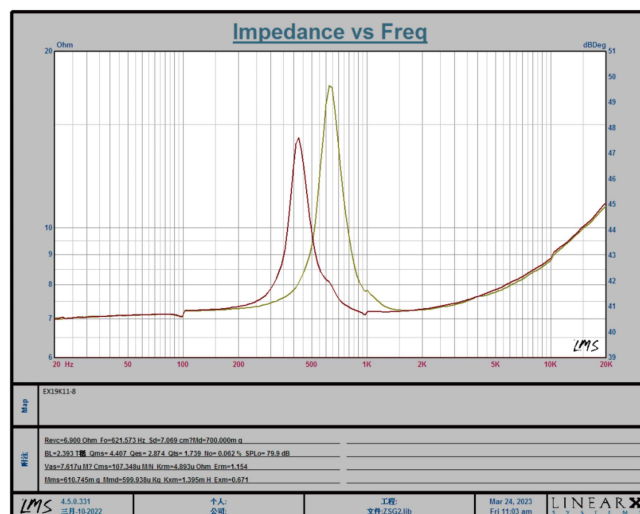

Installation

- 1)Before installing the exciter, make a test run to determine the exciter position for the best sound performance.
 - 2)To install exciter, remove the protective film and then glue the exciter onto a clean, flat surface.
 - 3)Switch off the amplifier prior to connecting the exciter.
 - 4)Connect exciter to a speaker out-put of the amplifier. When connecting exciters to a single output, make sure that they have the same polarity.
- Do not push the exciter below the minimum load impedance or overloaded

Note:Once the exciter has been mounted to a surface, use a knife to detach the exciter. Never pull the housing,or the exciter may be damaged.
The exciter can be reused by changing the adhesive ring.

